



P117 Ventilation Window Lock Fitting Instructions

Tools Required



Bradawl

Posidrive
Screwdriver

If fixing screws into hardwood frames, use a suitable drill to make a pilot hole

Fitting Instructions

1. Assemble the lock as shown in Fig. 1, ensuring the Locking Screw (D) is firmly tightened using the key. If the window frame has a sloping face you will need to use the plastic wedge provided under the Base Plate (B) to level the lock.
2. With window closed, position the lock in the opening corner farthest from the hinge with the Stay Bracket (C) at approximately 14mm from the inside edge of the frame, as shown in Fig.1.
3. Mark the screw position through the exposed hole in the Base Plate (B).
4. Using the key, loosen the Locking Screw so that the Stay Arm (A) can slide to reveal the second fixing hole. Mark position and secure the Base Plate using two of the screws provided. **NOTE:** Ensure that the screw will not touch the glass.
5. Reposition the lock as shown in Fig. 1 and mark the screw positions through the fixing holes in the Stay Bracket (C). Remove the locking screw and secure the Stay Bracket to the opening window using the screws provided.
6. Replace the locking screw and test the lock to ensure correct operation.

For top hinged windows follow instructions as above but position lock to the side frame as shown in Fig. 3.

IMPORTANT

1. Be sure to always locate and lock the rotating locking screw in a notch in the Stay Arm.
2. Always tighten securely with the key.
3. Never leave the key in the presence of young children.

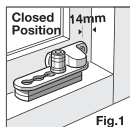


Fig.1

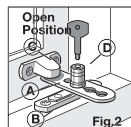


Fig.2

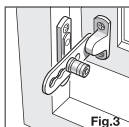


Fig.3



The world's favourite lock since 1843

School Street, Willenhall, West Midlands WV13 3PW

www.yale.co.uk Tel: +44 (0) 1902 364647 E-mail: info@yale.co.uk

Issue No: 01-2012

An ASSA ABLOY Group brand

ASSA ABLOY



2 Year Guarantee Statement

This product is guaranteed for consumers against faulty workmanship, materials and function for a period of 2 years from the date of purchase providing the full installation and maintenance instructions are followed. Please keep your proof of purchase safe, this must be submitted when making a claim under this guarantee.

Please note that it is a condition of this guarantee that your Yale product:

- Has been correctly installed and maintained in accordance with the Yale installation and maintenance instructions provided to you at the time of purchase.
- Has not been modified or damaged in any way.
- Has not been subjected to unauthorized repairs.

Yale are responsible under this guarantee for repairing the product or replacing the product as we deem necessary. If there is fault with the product, please contact Customer Services on 01902 364647, who will give you the name of an expert and confirm what you need to do to make a claim under this guarantee.

Please do not carry out any repairs without our authority or by using an unauthorised expert. Any repairs or other works carried out without our authorization or by using an unauthorized expert will not be covered under this guarantee.

This guarantee is non transferrable and applies to products purchased in the United Kingdom only. This guarantee does not apply to normal wear and tear. This does not affect your statutory rights. A full copy of this guarantee is available upon request by writing to Yale UK, School Street, Willenhall, West Midlands. WV13 3PW or by visiting our website www.yale.co.uk.