




## Preparation

Check the size of your existing aperture. If this is smaller than dimensions shown below, further material will need to be removed from the door using a jigsaw to enlarge the aperture as shown below.

## Fitting the letterplate

 Separate the 2 sides of the letterplate and identify the internal side from the external side. The internal side has will have 2 holes undeneath the flap for the fixing screws provided

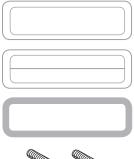



- 2. Place the foam weather seal over the inside sleeve of the external letter plate.
- 3. Insert the external section of the letter plate in to the front of the door, with the weather seal between the letter plate and the door.
- Insert the internal plate on the inside of the door. Push the external and internal plates together to interlock.
- Lift the flap of the internal plate and use the fixing screws provided to secure this in place. Do not over tighten.



