

size: 270 x 170mm (아트지)

## Installation Procedure (Double-opening door)



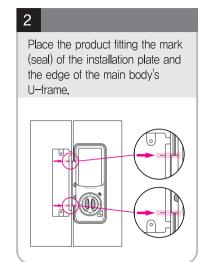

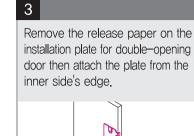




Secure the latch with the 4

double-opening door latch

When mounting the installation plate on double opening door, Make of installation plate must be placed on the edge of the main body's U-frame. (see the pictures below for references)

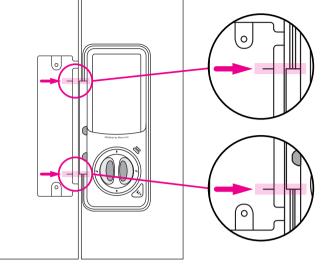


\* When stored in low temperatures, the double-sided tape's adhesive strength drops.

The product must be stored in room temperature.

- \* After the installation, confirm if the door opens and closes properly.
- \* Take caution not to apply excessive force on the installed product.

ISL-1438-01



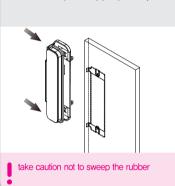



5



Secure the plate with the 2 plate

securing screws.





6


screws.

Screw Screw


## 安裝方法(雙開門用)

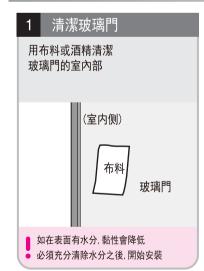

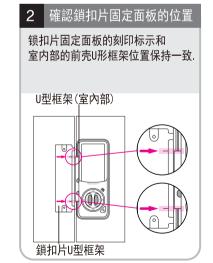

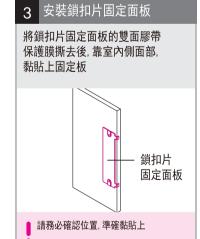

※ 安裝鎖扣片固定面板時,鎖扣片固定面板的刻印標示 和室內部的U型框架位置需保持一致(請參考下面圖片)

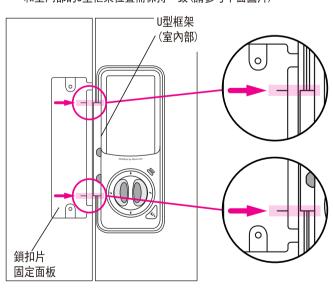

\* 請於常溫下使用本產品.

\* 安裝後,請確認開/關動作是否正常使用

## 4 安裝雙開門用鎖扣片


對準鎖扣片固定面板,準確地插入雙開門用鎖扣片(U型框架). (請注意橡膠墊圈不要擠到裡面)



● 安裝鎖扣片時,請不要強制 ● 扳開鎖扣片的U型框架

## 5 安裝雙開門用鎖扣片

確認安裝黑色的2個U形框架固定用螺絲!主意:必須要用2個黑色螺絲(7mm)

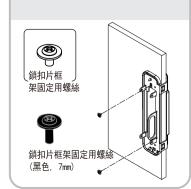

6 鎖上4顆鎖扣片側邊螺絲

