 


## Panic Button (EF-PB)

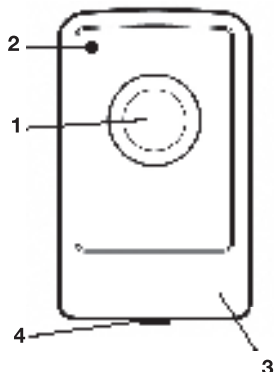

### Description

1. Activation/Learn Button (Red): Use for activating the alarm and for learning-in.
2. LED Indicator for activation and low battery.
3. Knockouts for wall mounting (under backplate)
4. Cover securing screw

### Inside the Box

 
- 1 x Panic Button
- 2 x wall plugs/cross head fixing screws.
- 1 x CR2032 coin cell battery

### Programming & Location

#### Programming:

Program your Panic Button before installation and test afterwards. Please see your current Alarm user manual.

For more information on this product and Yale Smart Living Range visit  
[www.yale.co.uk/smart-living](http://www.yale.co.uk/smart-living)  
**Consumer Support:** info@yale.co.uk

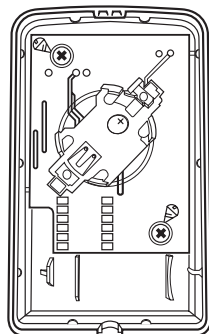


#### Installation:

Undo the cover screw and insert the battery with the side uppermost.

Press battery into holder fly with finger and thumb until a click is heard (see picture below)

 Insert the battery under the two tabs and click into place.

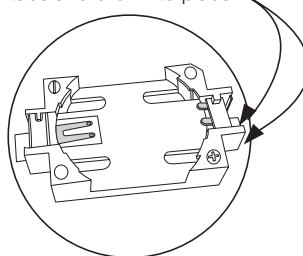

The 2 year guarantee for this product is active from the date of purchase (A copy of this guarantee is available on our website).

**Location:**

The Panic Button provides extra protection for you and your family. When help is needed the Panic Button can activate your alarm immediately - even when the system is disarmed.

- Mount at chest height for ease of use
- Mount on flat wall surface
- Designed for indoor use only
- Out of reach of children
- Hidden from view while easily accessible
- Not clearly visible to an intruder
- Easily accessible
- Indoor use only

**Mounting:**

The Panic Button can be used free standing or wall mounted. For wall mounting:

- Break through the 2 knockouts in the backplate of the Panic Button
- Drill holes on the wall surface using the holes as template. Insert wall plugs and screw the backplate to the wall.
- Fix the Panic Button in place on the backplate and tighten case screw.

## Operation

**Activation:**

Press and hold the red button for at least 3 seconds. LED will light momentarily and the alarm will be activated.

**Silence an Alarm:**

Press and hold the red button for at least 10 seconds. LED will light momentarily and the alarm will be silenced.

**NOTE:** Silencing the alarm with the Panic Button does not reset the system. If the alarm is armed prior to activation, the system will re-arm after being silenced with the Panic Button.

## Specification

**Environmental conditions:**

-10c to 40c , relative humidity 85% non-condensing. Indoor use only

**Radio:**

868MHz FM

Compatible with Yale 'SR' and 'EF' Alarm Kits.

Issue No. 1A



PACKAGING

**WEEE**

Note: Waste electrical products and batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Information and illustrations are subject to change. Yale reserves the right to alter the specification and product design at any time without notice.