



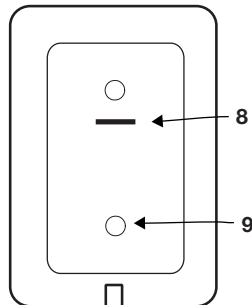

## Key Pad (EF-KP)

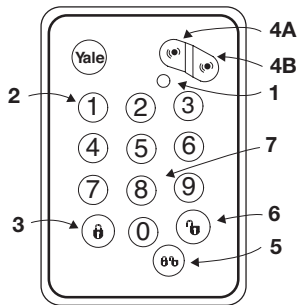

### Description

1. LED Indicator: Displays Key Pad status.
2. Numeric Keys: Used for entering PIN codes.
3. Arm Key: Press for Away Arming.
4. Panic Keys A and B: Press both for Panic alarm.
5. Home Arm Key: Press to Part Arm.
6. Disarm Key: Used with PIN code to turn system off or to silence alarm.
7. Learn Button: Press button 8 and 9 together.
8. Battery saver tab (pull tab out to activate)
9. Knockouts for wall mounting

### Inside the Box

- 1 x Remote Key Pad
- 2 x wall plug/screws
- 1x CR2032 coin cell battery (fitted)

For more information on this product and Yale Smart Living Range visit [www.yale.co.uk/smart-living](http://www.yale.co.uk/smart-living)  
**Consumer Support:** [info@yale.co.uk](mailto:info@yale.co.uk)

### Programming & Location

Program your Key Pad before installation and test afterwards. Please see your current Alarm user manual.

Locate the Key Pad taking into account the following points:

- Mount at chest height for ease of use
- Designed for indoor use only
- Key Pad should be accessible from a protected entry/exit point
- Ensure that the Key Pad is not visible from the outside of the premises.



The 2 year guarantee for this product is active from the date of purchase (A copy of this guarantee is available on our website).



# Specification

## Environmental conditions:

-10c to 40c, relative humidity 70%  
non-condensing.

## Radio:

868MHz FM

Compatible with Yale 'SR' and 'EF'  
Series Alarm Kits.

Issue No. 1A



Information and illustrations are subject to change.  
Yale reserves the right to alter the specification and  
product design at any time without notice.

## WEEE

Note: Waste electrical products and batteries should not be disposed  
of with household waste. Please recycle where facilities exist. Check  
with your local authority or retailer for recycling advice.

**ASSA ABLOY**

An ASSA ABLOY Group brand