

P1109 & X5 Rim Cylinder Fitting Instructions

Tools Required





Flat Head Screwdriver

Hacksaw

Fitting instructions



When replacing a cylinder, first remove the existing nightlatch from door.



Unscrew the existing connecting screws and remove the cylinder and ring that are to be replaced.



3. Insert the new cylinder through the ring and place in position. Secure with the two flatended connecting screws. If necessary, use a fine-toothed

If necessary, use a fine-toothed hacksaw to shorten the flat connecting bar



Replace existing lock to door.
If applicable, align the arrow on the back of the case with the arrow on the rotatable slot.

CARE OF YOUR CYLINDER

Never take the cylinder apart. Never oil or paint the cylinder. To lubricate, use a Teflon based solution.



The world's favourite lock since 1843

School Street, Willenhall, West Midlands WV13 3PW www.yale.co.uk Tel: +44 (0) 1902 364647 E-mail: info@yale.co.uk

Issue No: 01-2012

ASSA ABLOY



