 




Controls

- 1 Motion sensor
- 2 Alarm speaker
- 3 Keypad
- 4 Battery low LED
- 5 Additional siren socket
- 6 Battery compartment
- 7 4.5V AC adaptor socket (AC adaptor not included)

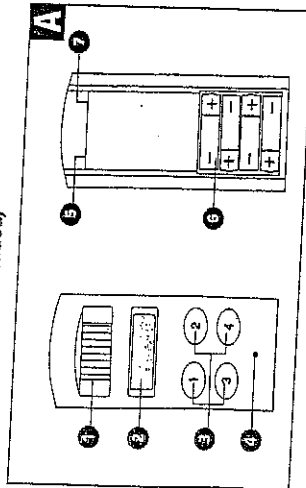

Battery installation

  - 1 The battery compartment is accessed from the rear of the alarm unit by removing the screw from the base and lifting the back cover **B**.
- 2 Insert four 'AA' size batteries (not included) following the polarity as shown **C**. When the last battery is inserted the alarm will beep.

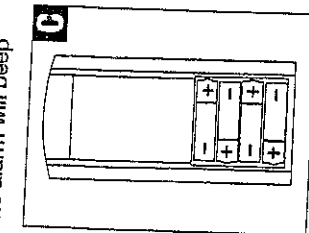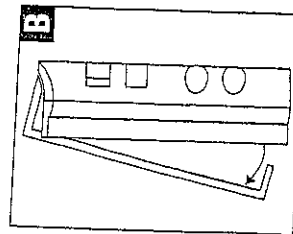

Operation

very loudly to indicate that the batteries are installed properly.

- 3 Replace the back cover and fix with screw.

The Battery Low LED will light when the batteries need replacing.

Programming the alarm

Immediately after inserting the batteries, the desired 4 digit security code must be set, simply press the desired 4 digits on the keypad.

Note: After removing the batteries, press number 4 before installing new ones. The alarm must be re-programmed with your security code each time the batteries are removed or replaced.

Leaving the protected area

Press keypad number 4 and a confirmation tone will indicate that the alarm is armed. You have 30 seconds in which to vacate the area. After this time, if motion is detected then the alarm will sound.

Entering the protected area

Type your 4 digit security code within 10 seconds. This will disarm the alarm.

Additional siren socket

This socket can be used to connect the SAA5030 Additional Siren to the alarm (not included).

Care and maintenance

To clean the case, simply use a soft slightly damp cloth with water and wipe dry immediately.

Caution: Never use chemicals to clean the case, as they may cause damage to the plastic and cause the alarm not to function.

Troubleshooting

The unit does not sound when the batteries are installed

Ensure that the batteries are connected correctly according to the diagram in the battery compartment

The alarm does not arm

Ensure that the back plate of the alarm unit is secure to hold the batteries in place and that the red light comes on when the keypad buttons are pressed

The red light on the base of the alarm is on
This is the 'Battery Low Indicator'. The batteries need replacing

Battery precautions

When using this product follow these precautions at all times.

- Use only the appropriate size batteries
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment.
- Incorrect polarity may cause damage to the alarm.
- Do not mix different types of battery such as Alkaline and Carbon-zinc or old batteries with new.
- If the alarm is not used for long periods of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not recharge batteries not intended to be recharged as they can overheat and rupture. (Always follow the manufacturer's directions.)

Yale

The Meadows, Cannock Road
Wolverhampton, WV10 0RR
Telephone +44 (0) 1902 366911
www.yale.co.uk
Email info@yale.co.uk



Due to our policy of continuous product development, Yale reserves the right to alter the product at anytime without notice.
Yale® is a registered trademark. © 2004 Security Products UK Ltd. All rights reserved.

An ASSA ABLOY Group brand

SAA5010 IFU Rev 2 11/04

ASSA ABLOY