



**Yale®**

## 3 Lever Lock

Recommended for use on  
internal timber doors

- 13mm anti-saw deadbolt
- For use with door handles
- Suitable for both left and right handed doors


**STANDARD  
SECURITY**



**POLISHED  
BRASS  
FINISH**

FOR MORE INFORMATION **SEE BACK OF PACK**



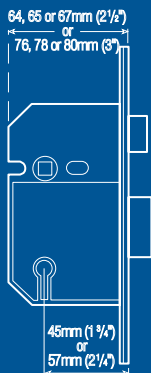

Mortice locks are sized by the depth of the lock case and the rectangular hole – the “mortice” – into which the lock fits.

If you are replacing an existing mortice lock, you can find out what size you need without removing your old lock.

Simply measure from the edge of the door to the centre of the keyhole. If the measurement is 45mm (1 3/4”), you need a 64, 65 or 67mm (2 1/2”) mortice lock. If the measurement is 57mm (2 1/4”), you need a 76, 78 or 80 mm (3”) mortice lock.

**FOR FULL FITTING INSTRUCTIONS SEE INSIDE PACK**

#### Tools required:

- Drill brace
- Required Drill Bits:**
  - Ø10mm (3/8”)
  - Ø19mm (3/4”)
  - Ø22mm (7/8”)
- 19mm (3/4”) chisel
- Bradawl
- Mallet
- Pozidrive screwdriver
- Pencil
- Scissors

#### Other Yale products:


#### Door handles & knobs

#### Alarm Kits


#### Stand alone alarms

#### Safes

#### CCTV

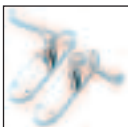

#### Recommended Back Door Security

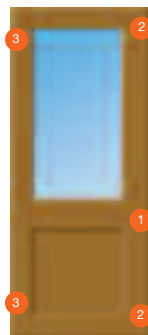

#### 1 Mortice Lock

**Standard Security**  
PM320 3 Lever Lock

**Standard Security**  
PM236 2 Lever Lock

#### 2 Door Bolts

PM444

#### 3 Hinge Bolts

P125 (for outward opening doors only)



MANUFACTURERS WARRANTY  
GUARANTEED AGAINST FAULTY  
MATERIALS AND WORKMANSHIP



The world's favorite lock

#### Yale

School Street, Willenhall,  
West Midlands WV13 3PW  
Tel: +44 (0) 1902 364606  
Fax: +44 (0) 1902 364692  
Email: info@yale.co.uk  
[www.yale.co.uk](http://www.yale.co.uk)



PACKAGING

PM-320-PB-64



5 010608 032056 >