

## **Tools Required**








Screwdriver

**Fitting Instructions** 

- 1. At the height you wish to fit your Security Door Chain screw the bracket horizontally onto the door using the screws provided.
- 2. Place the chain retaining bracket against the frame and once sure that it is in line with the bracket on the door, secure to the frame using the screws provided, recessing if required.
- 3. Select an appropriate position to hang the chain when it is not in use and screw the chain retaining button to the frame using the screw provided.

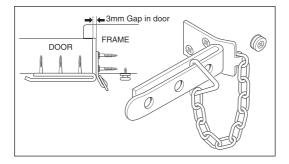



The world's favourite lock since 1843

School Street, Willenhall, West Midlands WV13 3PW www.yale.co.uk Tel: +44 (0) 1902 364647 E-mail: info@yale.co.uk

Issue No: 01-2012

ASSA ABLOY

