

Yale®

P114 Patio Door Lock Fitting Instructions

Tools Required



Drill

Required Drill Bits:
12.5mm & 3.2mm

Mallet

Posidrive
Screwdriver

Fitting Instructions

1. This lock can be fitted to the frame, threshold strip (for double sliding doors, not in the centre) or to the door itself. The best position can only be determined with reference to the specific door.

CAUTION: Before drilling or fitting screws, check position of glass, seals and any operating gear.

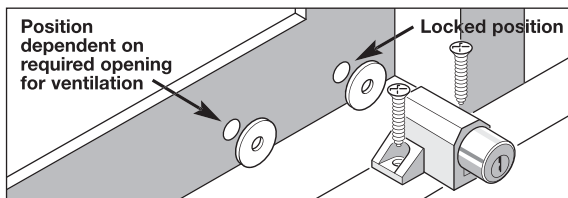
2. At the required position, hold the lock in place and carefully mark the position of the bolt hole. Drill a hole 12.5mm diameter and insert the black grommet supplied. Tap in with a mallet if required.

3. With the bolt extended into the grommet, mark the position of the fixing holes and carefully drill holes using a 3.2mm drill bit.

4. Secure with screws provided.

CAUTION: Security clutch head screws are provided. These cannot be removed once fitted. Take care to ensure the product is positioned correctly before fitting.

5. **Optional Ventilating Position:** Slide the door open to the desired ventilation position and drill a hole 12.5mm diameter as outlined in Step 2 above.
6. For extra security, fill the screw heads with plastic filler.

**Yale®**

The world's favourite lock since 1843

School Street, Willenhall, West Midlands WV13 3PW

www.yale.co.uk Tel: +44 (0) 1902 364647 E-mail: info@yale.co.uk

Issue No: 01-2012

An ASSA ABLOY Group brand

ASSA ABLOY