



P125 Hinge Bolts Fitting Instructions

Tools Required



Drill



Drill Bits:
Ø8mm
Ø15mm



Chisel



Mallet



Posidrive
Screwdriver



Pencil



Masking
Tape




Bradawl

Fitting Instructions

1. About 50mm below the top door hinge, drill a hole 8mm in diameter and 41mm deep centrally in the edge of the door. *(DIY TIP: Mark your drill bit with sticky tape or other coloured adhesive material at the required drill depth).*
2. Tap in the bolt with a until the ribbed portion is concealed within the door.
3. Carefully close the door so that the bolt marks the doorframe. At this point, drill a 15mm diameter hole 18mm deep which will accommodate the bolt, allowing for the swing of the bolt as it enters the frame as the door closes.
4. Position the lock plate over the hole, mark around the edge with a pencil then chisel out to shape so that the plate fits flush in the frame. Mark fixing holes with a bradawl and secure with two screws.
5. Repeat steps 1 to 4 about 50mm above the bottom of the door hinge.

The fitting of your new Yale Hinge Bolt is now complete.

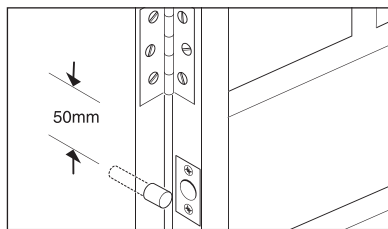

The world's favourite lock since 1843

School Street, Willenhall, West Midlands WV13 3PW

www.yale.co.uk Tel: +44 (0) 1902 364647 E-mail: info@yale.co.uk

Issue No: 01-2012

An ASSA ABLOY Group brand

ASSA ABLOY