



## P119 Sash Window Bolts Fitting Instructions

### Tools Required



Drill



**Required  
Drill Bits:**  
9.5mm Flat  
Drill Bit



Mallet



Hacksaw

Masking  
Tape

### Fitting Instructions

1. Ensuring the window is closed, use a 9.5mm flat drill bit to drill two holes centrally at either end of the cross member through the inner window frames, and to a depth of 19mm into the outer window frame.


**Note:** Ensure that the screw will not touch the glass.

*(DIY TIP: Mark your drill bit with masking tape or other coloured adhesive material at the required drill depth)*

**Note:** The inner window frame must be at least 32mm thick.

2. Using a mallet, carefully knock the long barrels into the inner frame and with the window open, carefully knock the short barrels into the outer frame. Ensure that the barrel faces are flush.
3. With the window closed, insert the bolts with the key supplied. It may be necessary to shorten the bolt using a hacksaw, to ensure the bolt head fits just inside the barrel.

The fitting of your new Yale Window Lock is now complete and guaranteed for 2 years.

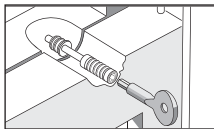

**The world's favourite lock since 1843**

School Street, Willenhall, West Midlands WV13 3PW

[www.yale.co.uk](http://www.yale.co.uk) Tel: +44 (0) 1902 364647 E-mail: [info@yale.co.uk](mailto:info@yale.co.uk)

Issue No: 01-2012

An ASSA ABLOY Group brand

**ASSA ABLOY**