

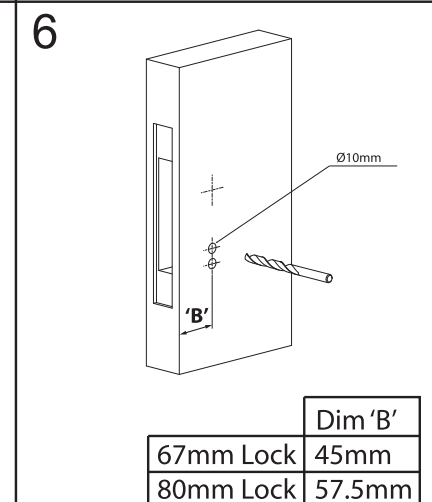
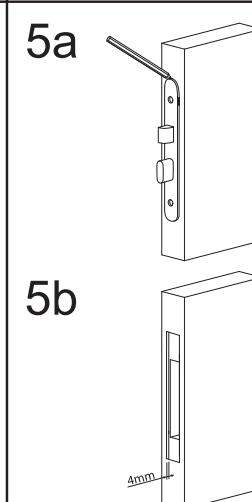
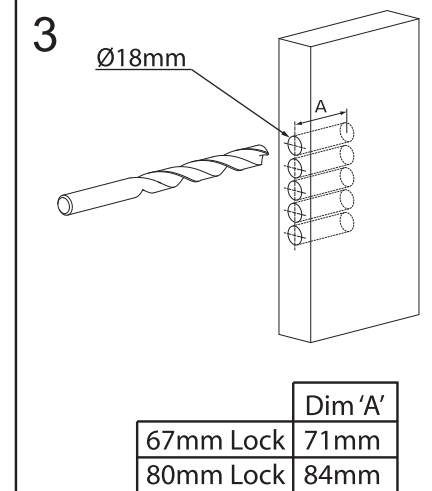


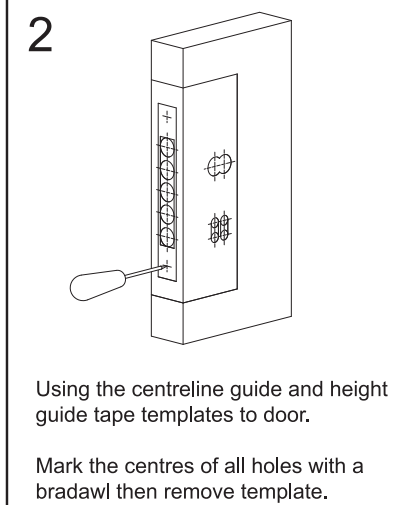


BS 3621 5 lever Sashlock

Tools Required

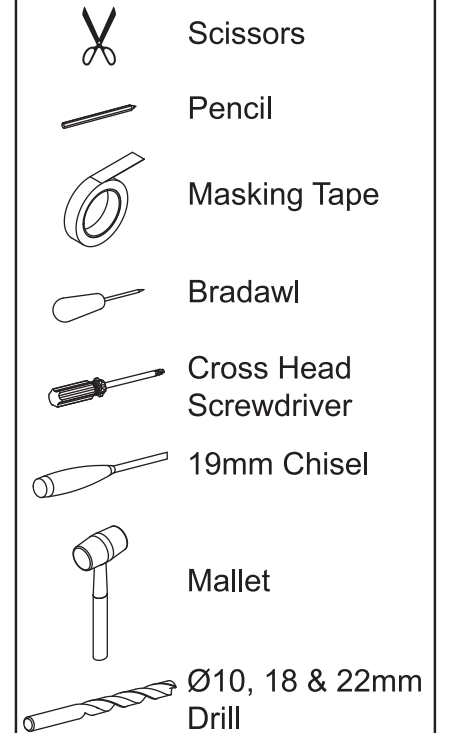


7a

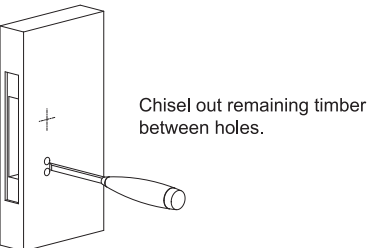


Chisel out remaining timber between holes.

7b

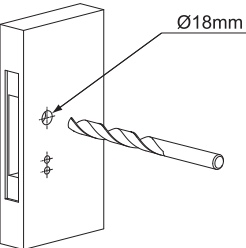


Ø18mm

8

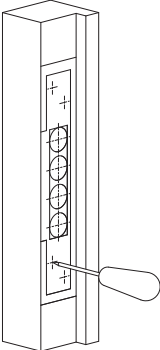


Secure template to frame with tape. Using a bradawl mark all centres (+). Then remove template.

9

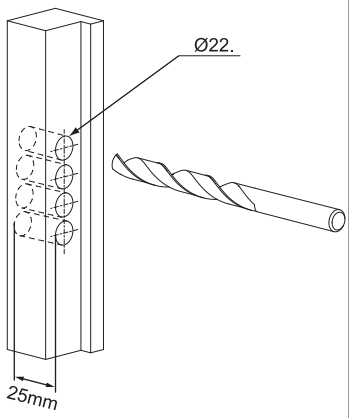


Ø22.
25mm

10a

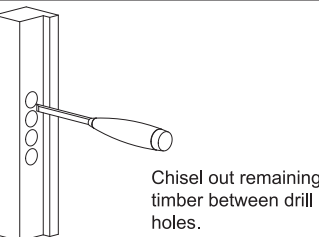


Chisel out remaining timber between drill holes.


10b

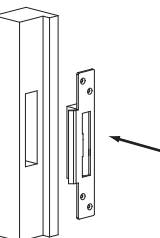

11a

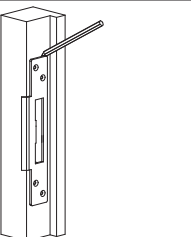


11b

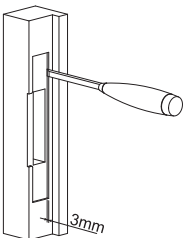


3mm

12

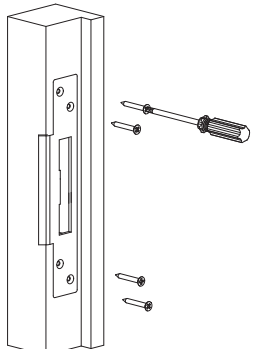


13a

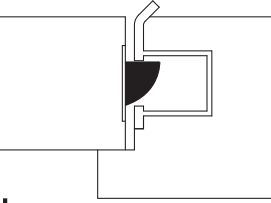

Reverse latch if necessary.


✓
Go to 16

13b

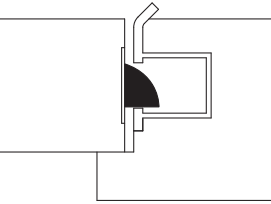


✗
Go to 14


14a

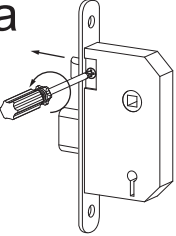


14b

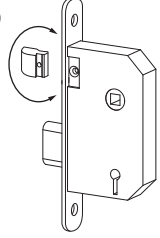


15a

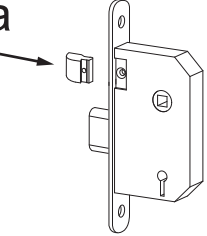


15b

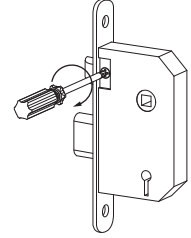

16

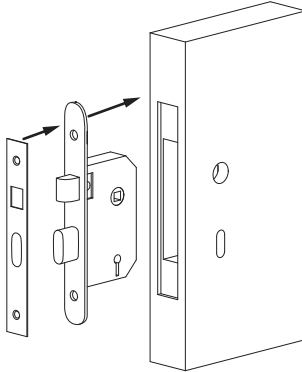

17

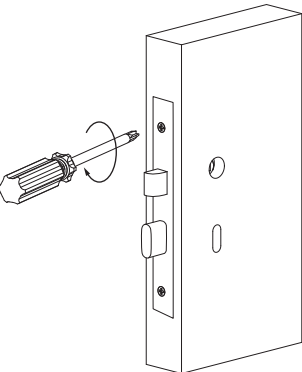

18

